

# WANT MORE FROM YOUR WEBASTO HEATER?

## Operating Tips to Maximize the Reliability of Your Cab Heater:

1. The heater will go through a 1 to 2 minute warm up cycle each time it's switched on. Likewise, it will run for 2 minutes in cool-down mode when it's turned off.
2. Close your bunk curtains when operating the cab-heater during your break. The heater is thermostatically controlled and will operate more effectively by creating a smaller area to heat.
3. Always make sure the air inlet/outlet grilles are clean and not blocked by any objects.
4. Turn the heater off if you will be away from the truck for more than 15 min.
5. The heater is not wired through the Low Voltage Disconnect. Accessories may shut down, but the heater will continue to run.
6. Your heater has a timer that shuts the heater down automatically after 10 hours.
7. The heater will only run when the ignition is off and the parking brake is set.
8. It's important to remember that whenever a heater is turned on, it must be allowed to run for at least 20 minutes. When the control dial is left on at all times, the heater will not be allowed to fully warm up any time you shut down for less than 20 minutes (fueling, bathroom breaks, lunch, etc.) This causes the heater to flood and carbon to build up, which will cause the heater to malfunction. **To prevent this, always use the control dial to shut the heater off after each break.**

**Winter high costs and issues are avoidable if we all do our job by proper planning and following winter operating guidelines!**